



HSR SERIES

HSR REPLACEMENT PARTS LIST

1. 42-471 Gasket, to cover
2. 42-464 E-Ring, jet needle
3. 42-463 Washer, jet needle
4. 42-523 Screw, needle retainer
5. 42-524 Clip, needle retainer
6. 42-469 O-Ring, pilot air
7. 42-466 O-Ring, fuel air
8. 42-468 O-Ring, A/P
9. 42-460 O-Ring, N.V.
10. 42-472 Screw, N.V. Retainer
11. 42-474 Needle valve assy. (42/45)
12. 42-461 Packing, float bowl
13. 42-467 Hose, overflow
14. 42-473 O-Ring, drain plug
15. 42-525 Drain plug (42/45)
16. 42-526 Drain plug (48)
17. 42-465 Screw, flt bowl, short
18. 42-470 Boot, A/P rod
19. Jet Needle
(723 series)
 - 42-514 #Y-2
 - 42-515 #Y-4
 - 42-516 #Y-6
 - 42-517 #Y-8
 - 42-518 #Z-0
- (HSR42)
 - 42-475 #95 richest
 - 42-476 #96 richer
 - 42-477 #97 standard
 - 42-478 #98 leaner
- (HSR45)
 - 42-479 #95 richest
 - 42-480 #96 richer
 - 42-481 #97 standard
 - 42-482 #98 leaner
20. Accelerator Pump Nozzle
 - 42-519 #70 std
 - 42-520 #60
 - 42-521 #50
21. Pilot Jet

42-484 #15 pilot	42-489 #27.5 pilot
42-485 #17.5 pilot	42-490 #30 pilot
42-486 #20 pilot	42-491 #32.5 pilot
42-487 #22.5 pilot	42-492 #35 pilot
42-488 #25 pilot	
22. Main Jet

42-493 #150 main	42-504 #177.5 main
42-494 #152.5 main	42-505 #180 main
42-495 #155 main	42-506 #182.5 main
42-496 #157.5 main	42-507 #185 main
42-497 #160 main	42-508 #187.5 main
42-498 #162.5 main	42-509 #190 main
42-499 #165 main	42-510 #192.5 main
42-500 #167.5 main	42-511 #195 main
42-501 #170 main	42-512 #197.5 main
42-502 #172.5 main	42-513 #200 main
42-503 #175 main	
22. 42-426 Short idle screw adjuster (optional)
23. 42-427 Long idle cable adjuster (standard)

