


Midwest# 18-346



**FRONT LOOM**

*Front Loom Hook-Up for  
Split Tank Application*

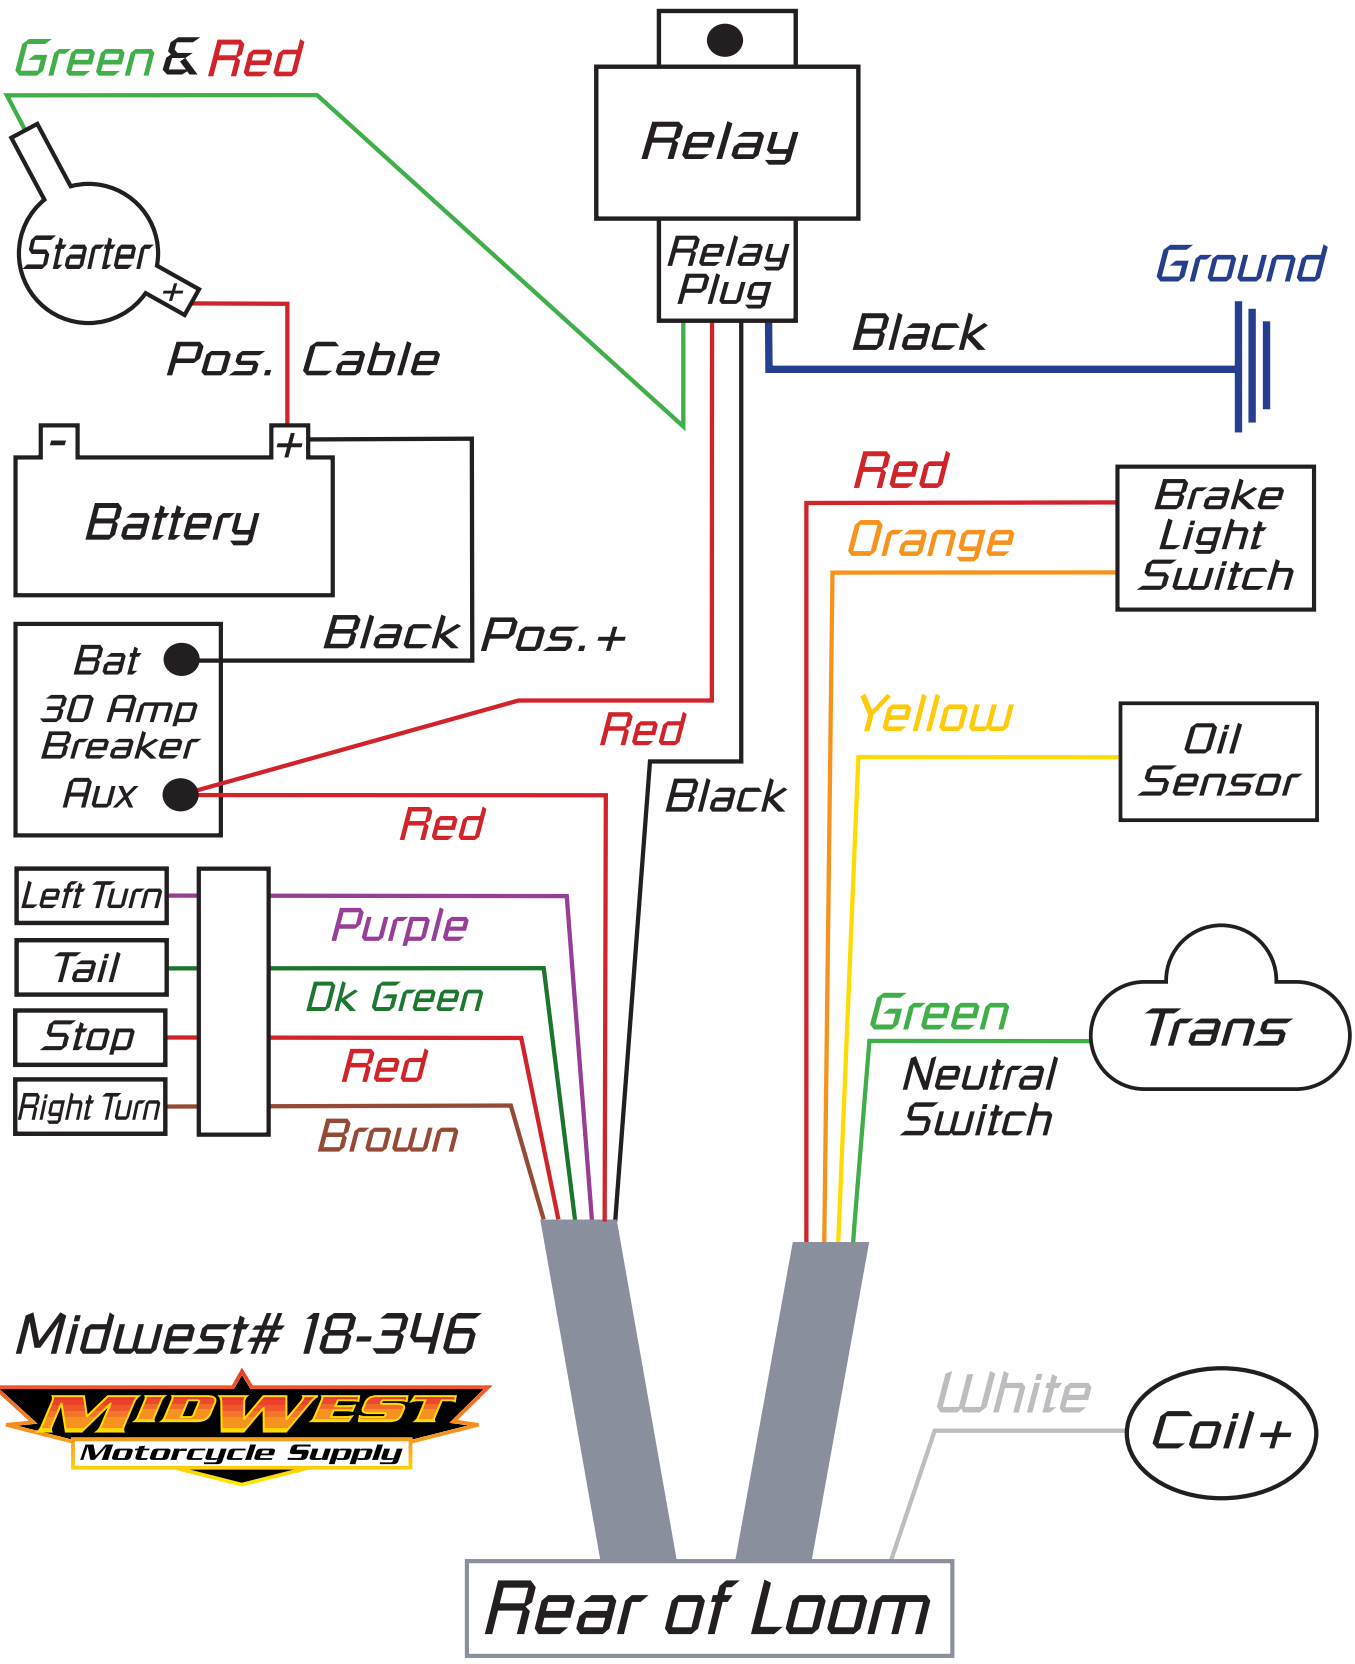

*Rear Loom Hook-Up*

# INSTRUCTIONS FOR PART NO. **18-346**

## 12 PIN CONNECTOR TO STOCK HANDLEBAR CONTROLS

### 1996 & LATER

Color From Loom Plug		Color from Handlebars
BLUE	goes with	BLUE (high/ low)
GRAY	goes with	GRAY (on / off button)
RED	goes with	RED / YELLOW (stop light button)
MAIN LOOM BLACK	goes with	BLACK / RED (starter button)
BLACK (horn)	goes with	YELLOW / BLACK (horn button)
MAIN LOOM WHITE	goes with	WHITE / BLACK (stop button)
WHITE TO DASH	goes with	WHITE (highbeam button)
BROWN	goes with	WHITE / BROWN (right turn button)
PURPLE	goes with	WHITE / PURPLE (left turn button)
GREEN	goes with	ORANGE / WHITE (right and left turn buttons only)
<b>NOTE:</b> Green is for turn signals <b>ONLY</b> and must connect to Orange/White on Right and Left turn signals <b>ONLY</b> .		
ORANGE	goes with	ORANGE / WHITE (horn and stop light switch)

### 1985 THRU 1995

Color From Loom Plug		Color from Handlebars
BLUE	goes with	BLUE (high/ low)
GRAY	goes with	GRAY (on / off button)
RED	goes with	RED (stop light button)
MAIN LOOM BLACK	goes with	BLACK (from starter button)
BLACK (horn)	goes with	BLACK (from horn button)
MAIN LOOM WHITE	goes with	WHITE (from on / off button)
WHITE TO DASH	goes with	WHITE (highbeam button)
BROWN	goes with	BROWN (right turn button)
PURPLE	goes with	PURPLE (left turn button)
GREEN	goes with	GREEN (right and left turn buttons)
ORANGE	goes with	ORANGE (right and left turn buttons)
<b>NOTE:</b> Put two wires in one pin on GREEN and on ORANGE that runs down to plug body from handlebars.		